


A plan view showing the L frame fitted into a standard recessed side window.

MEASURING: TECHNICAL DRAWING SHOWING THE LEFT SIDE RECESS

Plan View
Scale 1:1

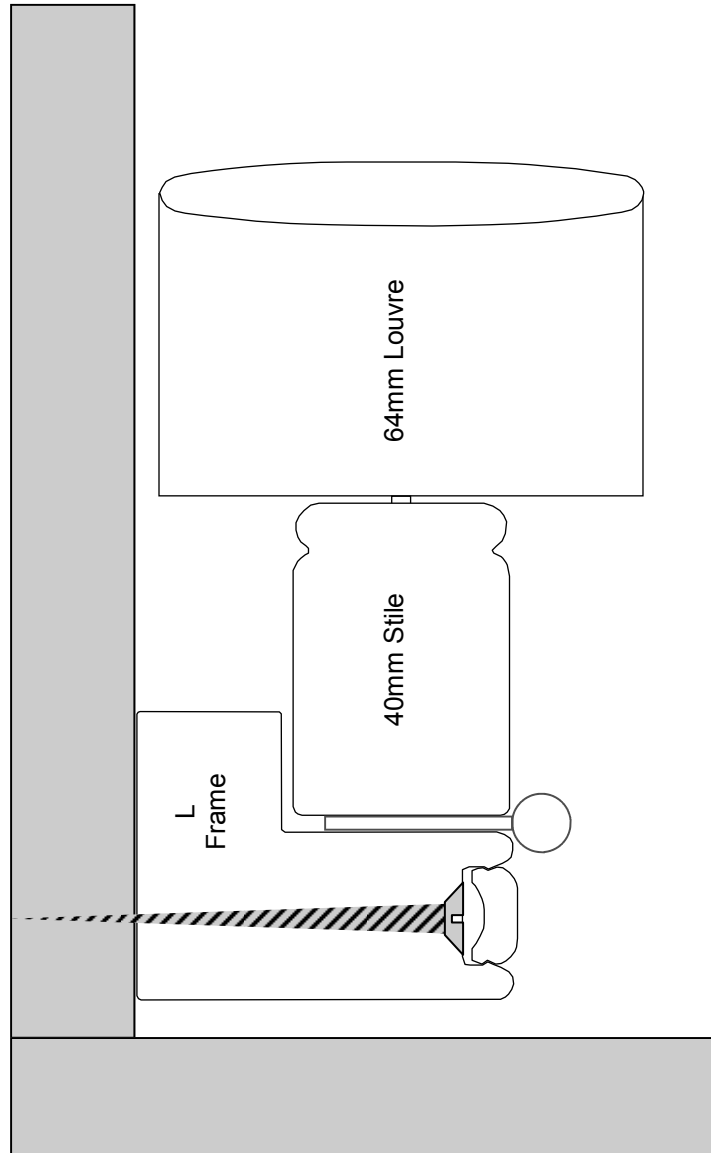


Technical drawing

A plan view showing the L frames fitted into a standard recessed bay corner.

MEASURING: TECHNICAL DRAWING SHOWING A TYPICAL BAY CORNER

Plan View
Scale 1:1

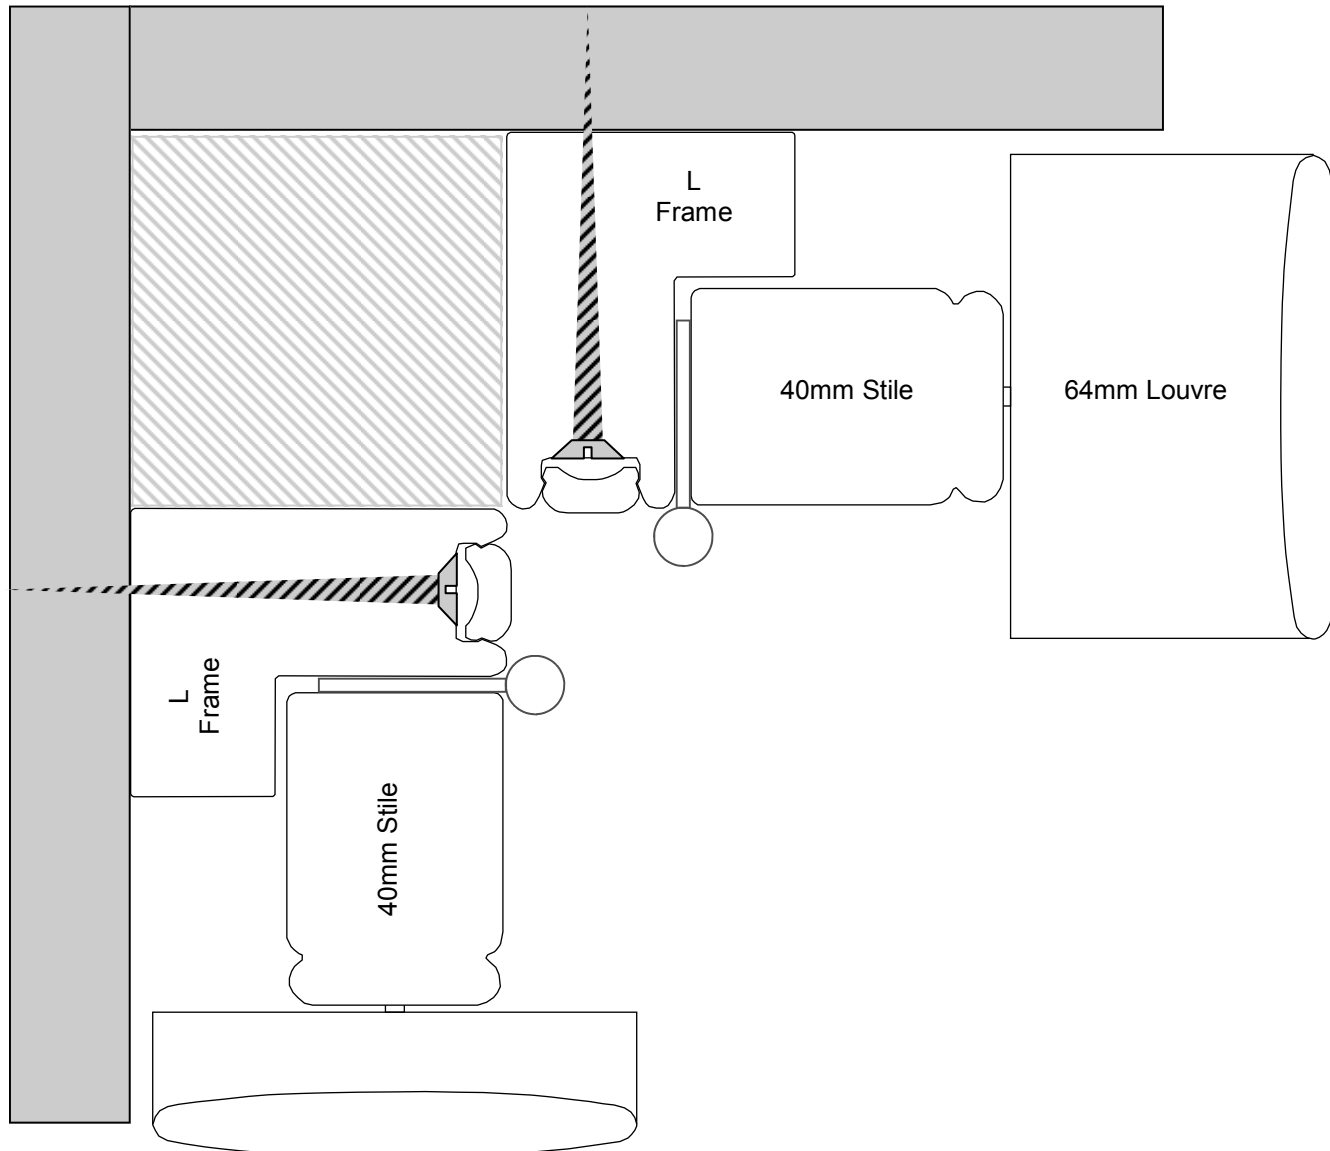


MEASURING: OPTIONAL CORNER BATTEN CUT OUT

Batten cut outs

There can be a build up of paint or quadrant beading found in the corners of bay windows.

Optional cut outs can be ordered on the back edge of the corner post to allow the batten to sit around the beading.

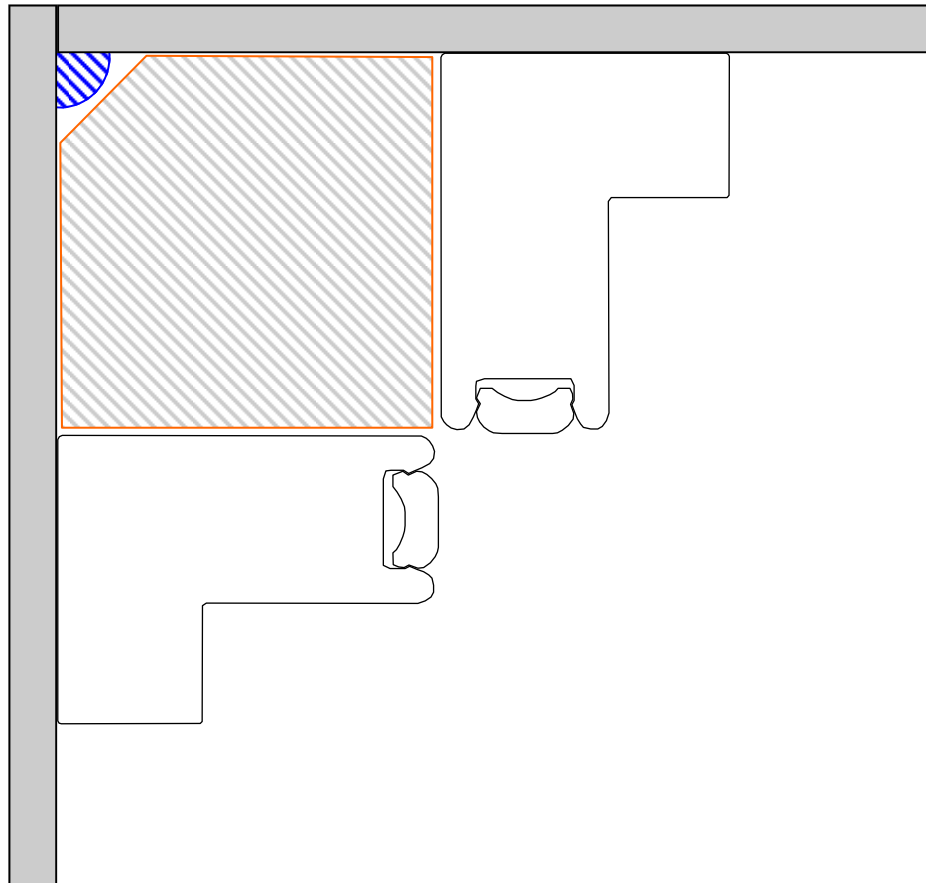

Frame options

Technical drawings showing the L Frames and sizes available.

MEASURING: FRAME OPTIONS

